

INSTALLATION INSTRUCTIONS: RailFX Single Corner Posts CABLES NEED TO BE INSTALLED BEFORE TOP RAIL IS INSTALLED

1. Install all posts
2. Install cables in posts. **It is important to only tension cables once the top rail is installed.** Refer to RailFX cable installation instructions for more details

To install cable through corner posts, slightly bend the cable to make lacing the cable through the corner easier.




Start by inserting the bent cable through the drilled hole in the post. Then, lace the cable through the post to the corresponding drilled hole on the other side of the post. Do this for all cables. Once the cables are installed through corner post, push the cable back into post to create a loop.



Drop the ½ galvanized pipe into the post through the cable loops. Once the galvanized pipe is all the way in the post, pull the cables towards you to tighten the hold with the pipe. Do this for all cables in the corner post.



Install the top rail and top rail filler. Lastly, tension the cables in the following sequence.

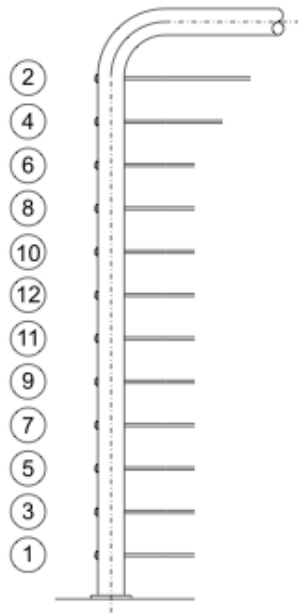

Need help? Call (206) 453-1123

Thank you for choosing Rail FX

RailFX.net

CLEANING AND MAINTENANCE

RailFX products and systems are fabricated with the highest-grade materials available on the market today. Our products are coated with an anodized, baked enamel, or powder coated finish applied with the application technology that meets or exceeds industry standards.

Regular Maintenance

Inspection - The only regular maintenance required is fastener/attachment inspection and general cleaning. It is the responsibility of the owner, at a minimum, once every 12 months to inspect fasteners and attachments. Over time fasteners may loosen and require adjustment and/or tightening. Fasteners will discolor over time but this does not affect the integrity and strength of the fastener.

General Cleaning

Materials will accumulate pollens, pollutants, algae or oxidation on the surface, this is part of the natural weathering process. RailFX recommends materials be cleaned at least one (1) time per year with a mild, non-abrasive soap and water solution. In areas where salts and pollutants are more prevalent the materials should be cleaned more frequently. Always rinse with fresh water to remove any residual soap.

Cleaning Guidelines

- Use clean water and a soft cloth for coated surfaces
- Use mild dishwashing soap with water and soft cloth for more aggressive cleaning needs
- Remove minor scuff marks or scratches using Soft Scrub™ or equivalent
- Remove sap, tree seeds, bugs, etc. as soon as possible, additional sun and heat exposure will accelerate adhesion to the coated surface and make removal more difficult
- Clean glass infill with regular glass cleaner or soap and water for glass
- Avoid chemicals, household cleaners, harsh abrasive, etc.
- Always test cleaning products on a small, inconspicuous area before applying any product to RailFX materials
- Have a question, we can help, contact us for additional assistance or visit www.railfx.net

Need help? Call (206) 453-1123

Thank you for choosing Rail FX

RailFX.net