

## PL-Lag Driver Instructions




Slide DRIVER PL-LAG onto the body of Push-Lock Lag, so that socket aligns with the wrench flat.



### For Wood End Posts:


Start the Push-Lock Lag into pre-drilled 7/32" hole in post. Using a ratchet or drill, turn the Push-Lock Lag clockwise into the wood post until the fitting bottoms out against the post.

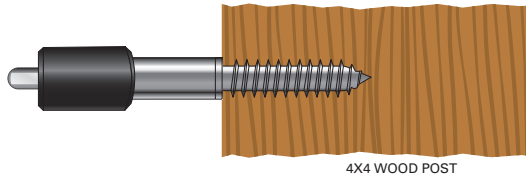

4X4 WOOD POST

### For Sleeved End Posts:

Start Push-Lock Lag into pre-drilled 7/32" hole through the sleeve and into the post. Using a ratchet or drill, turn the Push-Lock Extended Lag clockwise into the wood post until the fitting bottoms out against the sleeve.

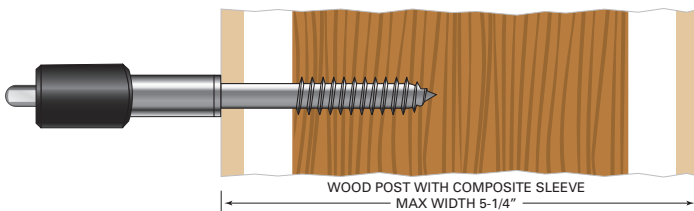

WOOD POST WITH COMPOSITE SLEEVE  
MAX WIDTH 5-1/4"

Once installed, slide DRIVER PL-LAG back off the Push-Lock Lag and move onto the next fitting.